




Installing Bulk Head Fitting in a Rain Barrel

STEP ONE: Drill 7/8" Hole in Rain Barrel.



STEP TWO (Outside Barrel):

Insert small side of fitting (with one rubber washer) into 7/8" drilled hole. Fitting and rubber washer should fit snugly against rain barrel.

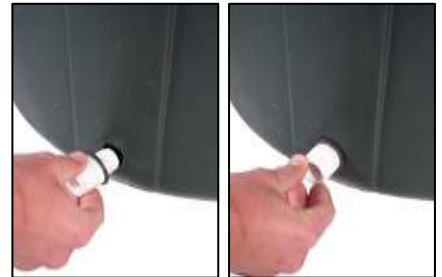

STEP THREE (Inside Barrel):

- Slide rubber washer over fitting so that it fits snugly against inside of rain barrel.



- Thread metal washer onto threads with smooth side against inside of rain barrel.



- Hand tighten.

- Hold metal washer in place with channel locks while hand tightening fitting from the outside.



Installed Bulk Head Fitting:



INSIDE



OUTSIDE